

# OUTDOOR SMART TWIN SOCKETS


# click<sup>®</sup>

Model: CL104

## 1 HAVE YOU GOT EVERYTHING?

- A. Outdoor Smart Twin Socket
- B. User Guide

## 2 PRODUCT OVERVIEW

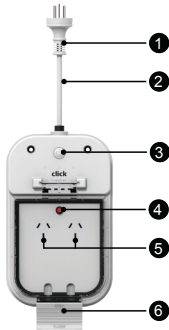

- 1. Plug (10A)
- 2. Cable (0.9M)
- 3. Power Button
- 4. Surge/Overload Protection reset button (10A)
- 5. Twin Sockets
- 6. Cover open latch

## 3 OPERATION

### App use:

1. Either scan one of the QR codes with your phone/tablet camera, or search for 'Tuya Smart' or 'SmartLife' on your smartphone/ tablet's app store and install one of these two apps. The apps are very similar, either will work.



Tuya Smart



SmartLife

2. Open the newly installed app and create a new account (or log in with an existing account).
3. On the app page, tap '+' to add a device. Tap 'Electrical' and choose 'Power Strip (Wi-Fi)'.
4. Plug in your Smart Outdoor Plug to a mains outlet. The Indicator Light on the Power Button will blink fast. This means that the device is ready to begin pairing. Note: If the Indicator Light is not blinking, try resetting the device. Press and hold the Power Button for 5 seconds, then release. The Indicator Light should now blink fast.
5. Follow the prompts on the app to pair the Outdoor Plug to your account. When prompted, select your Wi-Fi network and enter your password. Note that connection is only possible via a 2.4GHz Wi-Fi connection.

6. Once the Smart Outdoor Plug has connected to your home Wi-Fi, setup is complete. Once complete, you can control the Sockets via the app whenever you have a data connection.

### Important notes for outdoor use:

- The unit must be installed vertically, in the direction indicated by the arrow on the unit's rating label.
- The unit's power cord must be plugged into a suitable weatherproof wall outlet.
- The power cords of connected devices must be passed through the holes in the lid, and the lid must be closed securely.

### Operating steps:

1. Plug the product into a suitable mains socket. The red surge protection indicator and the green power button indicator will turn on.
2. Connect your devices to Plugs 1 and 2 as required. Run the cables through the cable pass-through and close the lid securely.
3. Hang the unit on a suitable screw.
4. Press the power button to turn on Plugs 1 and 2.
5. Use the app on your smartphone or tablet to control the plugs individually.
6. After use, press the power button to turn off the plugs. Unplug the product from the mains socket to completely disconnect it from power.



## TROUBLESHOOTING

- |                         |  |
|-------------------------|--|
| Wi-Fi is not connecting | <ul style="list-style-type: none"><li>• Only 2.4GHz Wi-Fi is supported. 5GHz Wi-Fi is not supported.</li><li>• Ensure there is adequate Wi-Fi signal at intended location.</li></ul> |
|-------------------------|--|

I am not getting notifications on my smartphone

- Make sure you have turned on notifications for the installed app, in your smartphone settings.



## SPECIFICATIONS

Input	240V~50/60Hz
Mains Outlet	Max 10A, 2400W
IP Rating	IP54



## GIVE US A CALL

Call our After Sales Support on 1300 886 649 (calling within Australia).  
0800 836 761 (calling within NZ). Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

# OUTDOOR SMART TWIN SOCKETS

# click®

Model: CL104

## GENERAL SAFETY WARNINGS

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 3190 and AS/NZS 3100. to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

- This product has no user-serviceable parts. Do not dismantle. Refer all servicing to qualified personnel only.
- Do not use this product near any heat sources like heaters, radiators, stoves, or other appliances that produce heat.
- If the product has sustained any damage such as from being dropped, do not use again until checked by a qualified electrician. The device must be unplugged to achieve isolation before any inspection or repair to the device is attempted.
- The plugs of your connected devices are protected when the lid is closed, however the Outdoor Smart Outlet's own plug must be connected to a weatherproof powerpoint or otherwise kept safe from the elements.

## CAUTION

- Do not expose to gasoline, oil, solvents, pool chemicals, etc.
- Do not use in hazardous locations!
- Do not use if damaged!
- Do not disassemble! Ingress protection IP54.
- Do not submerge in water!
- Remove condensation with a soft, absorbent cloth.
- Turn off the power before handling connections in wet environments!
- Store in a dry place, away from direct sunlight.
- Ensure that when closed, there are no visible gaps in the cord seal! If necessary, keep the cover open until the cord seal fully recovers.
- This product is not suitable for permanent installation.

## IMPORTANT

- Read all instructions carefully before use.
- Keep these instructions for future use.
- Suitable for domestic, indoor or outdoor use only. The IP rating for this product (indicated on the unit's Rating Label) is applicable only when the unit is installed vertically, the Power Cord is inserted into a suitable wall socket, the power cords of the connected devices are passed through the holes on the Lid, and the Lid is closed securely.
- Do not use an extension cord to connect the Outdoor Plug to the wall socket outlet; only use the Power Cord attached to the unit.
- This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse in liquid or allow liquid to run into the interior of the unit, as this could create an electrical shock hazard.
- Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not operate with the cord coiled up.
- Do not exceed total maximum load.
- Do not dispose of in fire or water, incinerate, or cause a short circuit.

## Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

## Cleaning the product

Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power sockets and plug pins with a clean, dry cloth.

**Product Name: Outdoor Smart Twin Sockets**

**Model Number: CL104**

Defined support period of Security Update: From 2026/14/02 to 2030/12/3. All critical security updates will primarily be provided through firmware updates. The main hardware and software components related to this product will receive synchronized updates within the support period listed below. Tempo Australia promises that the support period for security updates will not be shortened once it is announced. If it is necessary to extend the support period, we will update the information in a timely manner.

If you discover any security vulnerabilities, please submit them via email to [AU-compliance@tempo.com.au](mailto:AU-compliance@tempo.com.au). We will acknowledge your report within 7 business days.